LED CONTROL SYSTEM

Software operation manual

1. After installed the software, double-click the icon  to open it.
2. Screen setting
   - firstly you should set the parameters correctly. you can choose config--screen setting--(input the password:168) to set the parameters of our screen and the modules.

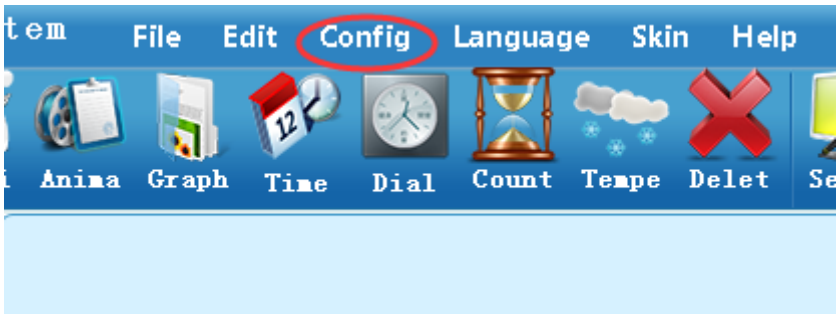

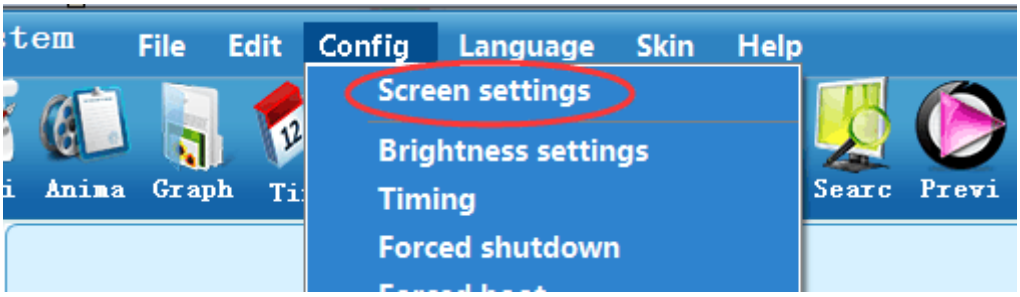

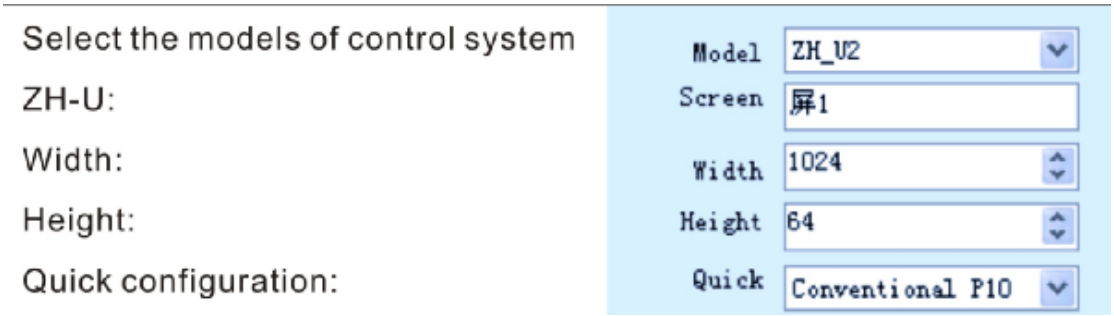

   - For Advance alignment setting, use the password 888 and select the correct alignment.
   - if you don't know about the parameter setting details, just check the label on the back side of screen, or contact our salesperson to provide.
   - Communication mode choose U disk ， and then click save and close.

3. Editing program,

- click "subti" directly.

Click the toolbar horizontal expansion and vertical extension in the simulation of the display window, or put the mouse on the edge of subtitles to draw back the partition.

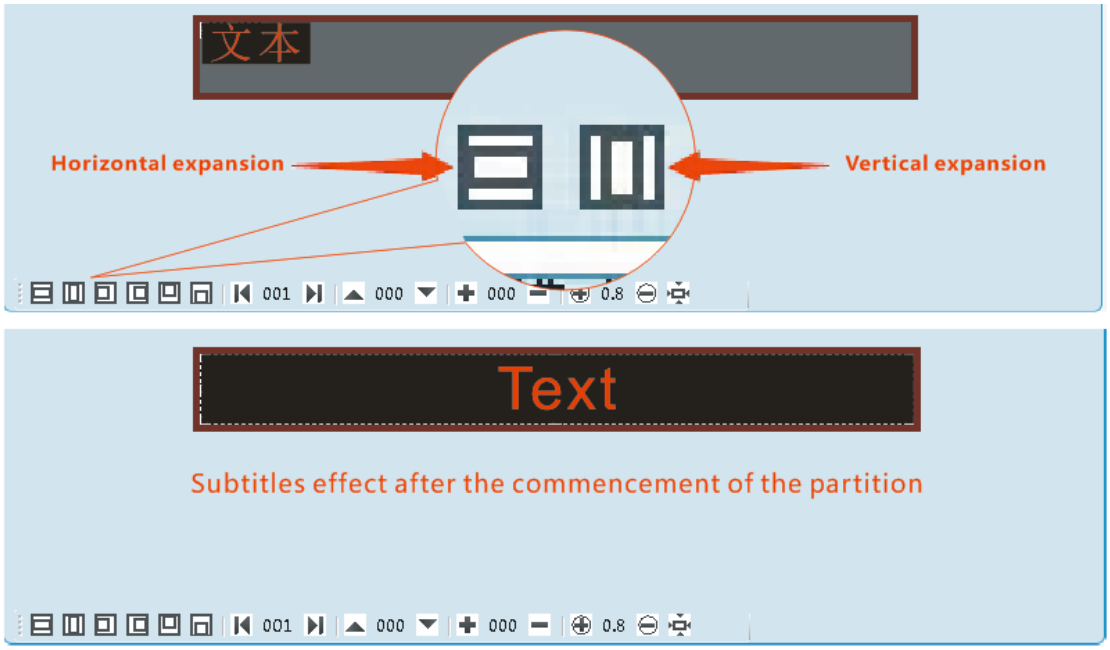

Input and edit the content to be displayed in the subtitle's attribute box.

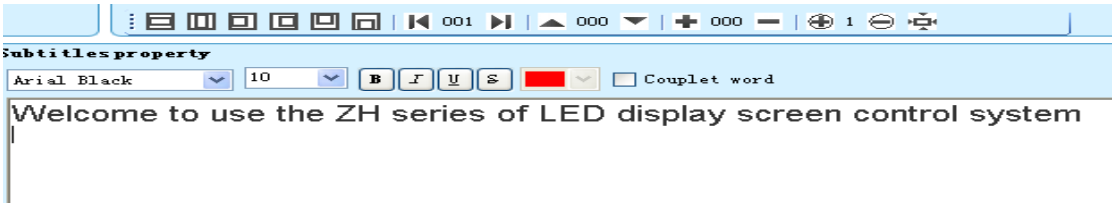

Select the desired effect, such as the common continuous left shift.

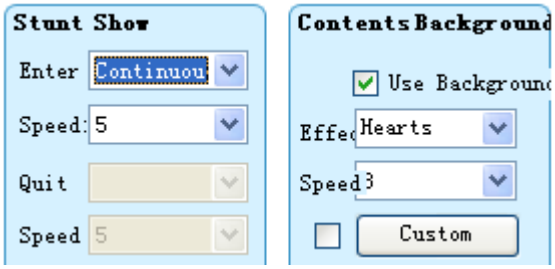

4. Sending Program.

- Click the U button on the software - - choose U disk and click the save button -- prompting data saved successfully

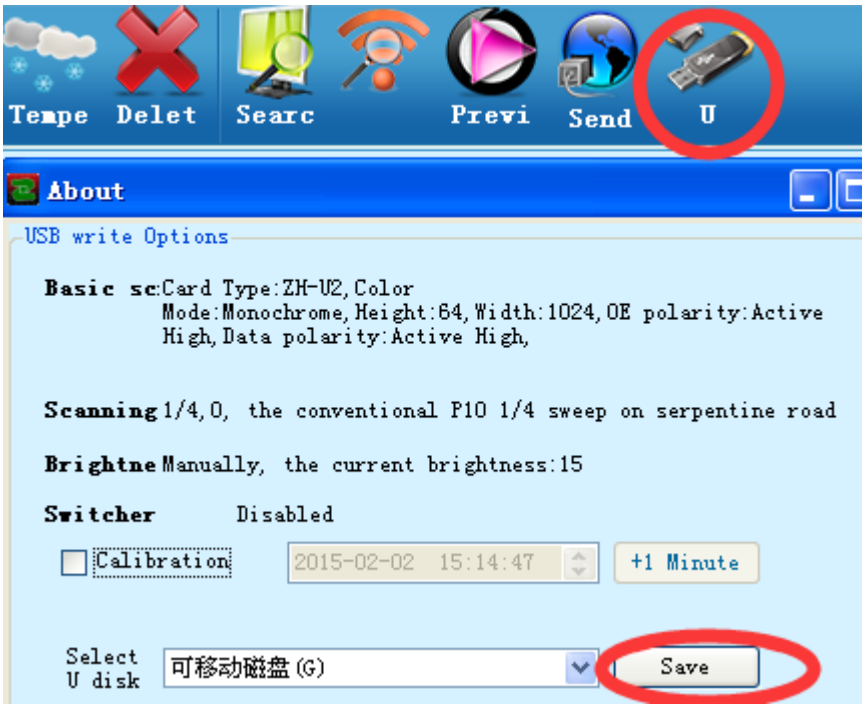

Safety exit U disk, insert U disk to control card's USB interface or screen's USB extension line, waiting for the U disk to be read, after that pull out the U disc.

5. **More function,**

- You can use more function by selecting" **Anima**" for animation," **Graph**" for complicate text and photo, "**Time**" for digital time and date," **Dial**" for Clock shape timing," **Count**" for clock-wise and counter-clock wise counter, by pressing the bottom shows below.

FAQ

1、How to display multiple lines?

Click graphic button on the software interface , click multiple lines in the text list.

2, How to play different content on same screen?

Add a separate program for different content to play, and set the play mode to play.

3、The model does not match the display, the machine model ZH-UXv3.03xx?

You could choose config--screen setting--(input the password:168) ,choose the module which the display shown.

4、Could I use of the card reader instead of U disc?

Does not recommend the use of the card reader instead of U disc.

5、What to do when display does not read U disk?

Formatting the U disk(When formatting, file system select FAT32,and cancel fast format). If it still couldn't work ,please change a U disk.

6, The brightness of full Led Screen is very low,

OE polarity setting is wrong, try to set opposite,

7, The text or logo on the led screen showing black.

Data polarity setting is wrong, try to set opposite.

8,The content on the screen showing in correct shape,

Alignment setting is wrong ,normal alignment can select from the quick box, for advance setting, use the advance password "888" to select suitable alignment, such as 13.